


Quick Guide

ZM-VE350

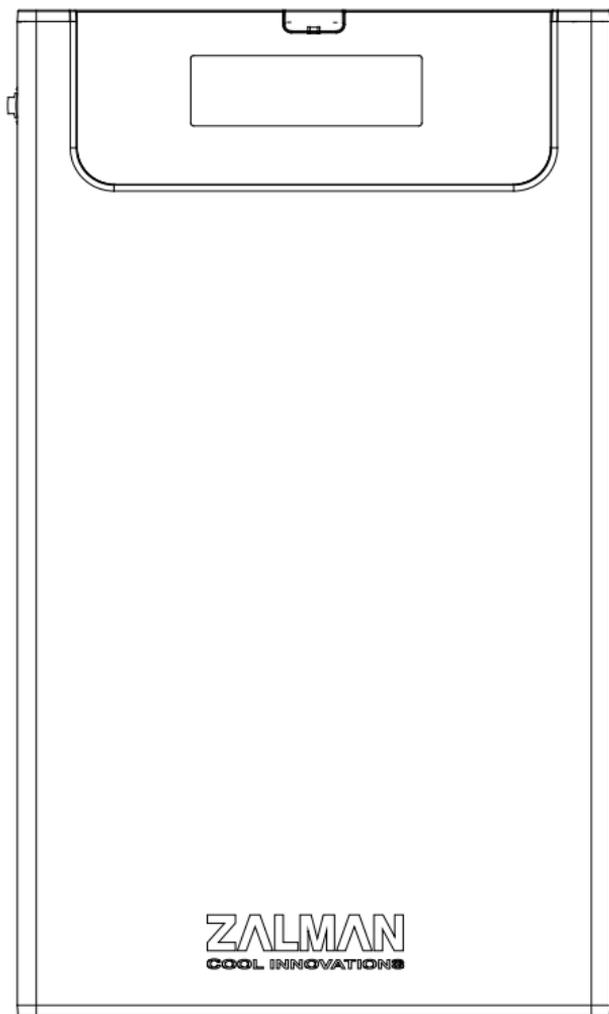

Please read this Manual before use

1. Precautions

- We are not responsible for any damages due to improper use, except installation error or normal use.
- Product design and specifications may be revised to improve quality and performance.
- Avoid inserting objects into the device.
- Keep device away from heat sources, direct sunlight, oil, and humid environment.
- Do not let the device be wet. It may not be covered by Warranty.
- It may have problem if used near magnetic objects.
- Exterior damage during use is not covered by Warranty.
- Do not turn on / off PC while device is connected to PC. It may cause device disorder or error.


2. Specifications

Case Material	Aluminum Alloy, Acryl, Poly Carbonate
Weight	96g
Dimensions	135.3(L) x 78.6(W) x 13.1(H)mm
Interface	USB 3.0


3. System Requirements

- CPU: Intel Pentium / 350 MHz or above compatible CPU
- OS: Windows 2000/XP/vista/7/8/8.1, Linux 2.6 or later, Mac OS X 10.0 or later

4. Components

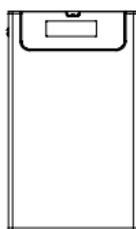


ZM-VE350

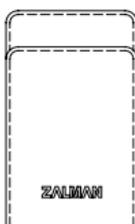

Pouch



Quick Guide

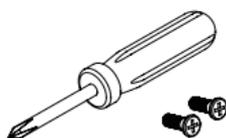


Screw Driver & Bolts 2pcs




USB 3.0 Cable

5. Mounting a 2.5" HDD


1

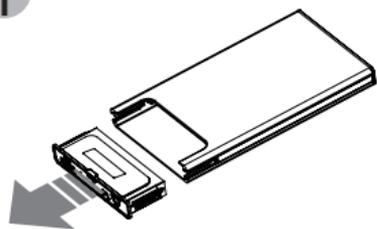


2

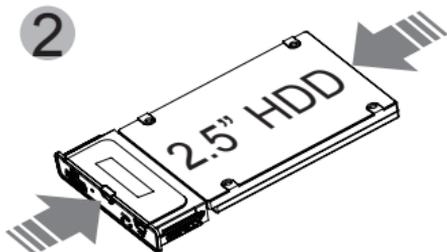


3

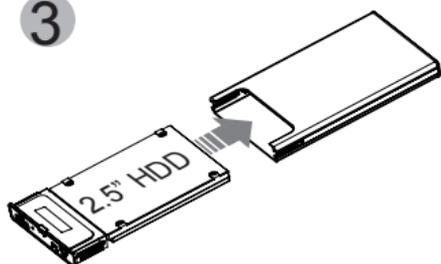

4

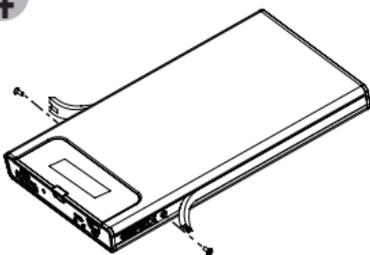


6. Names of Parts

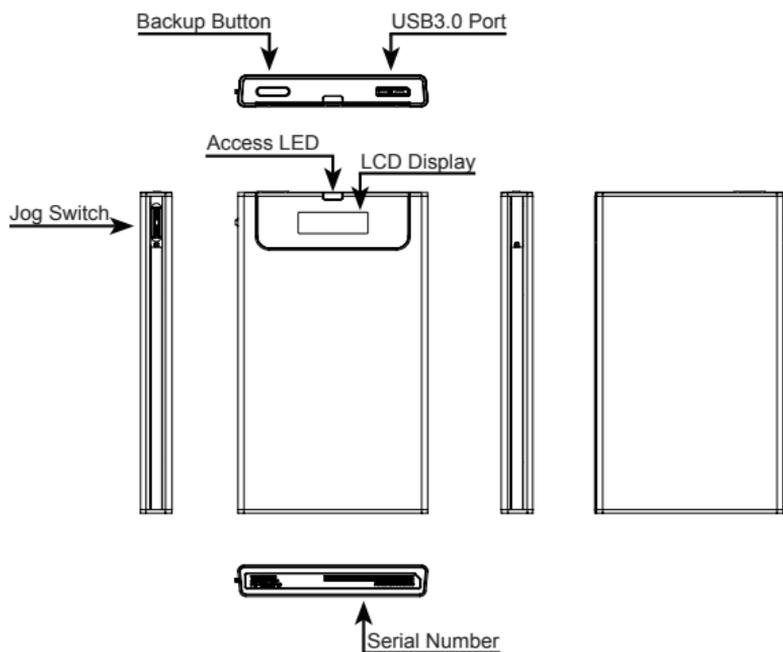

7. Connecting to PC

 
Connect device to PC's USB3.0 port using enclosed USB3.0 cable.
When disconnecting, please use "Hardware Safety Removal" on tray of the O/S.



8. Display and Icon



9. Using Jog Switch

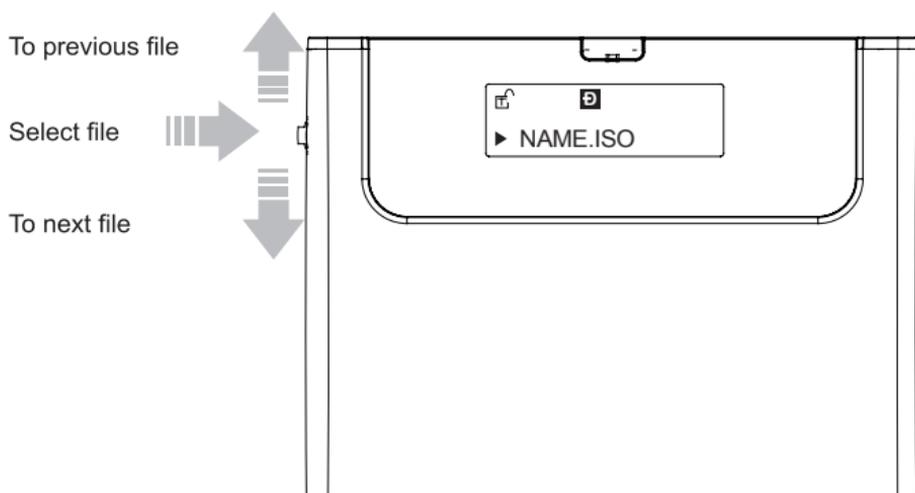

10. Menu Description

- To use Virtual ODD, iso file must be located in the “_iso” folder of device.
- Enter into menu mode if Jog switch is pressed for 3 seconds.
- If you want to use the backup software for MS O/S, you can download the software via Zalman web page(www.zalman.com)

(1) Main Menu

Mode Select	>	Device Mode setting
Information	>	Check HDD information and firmware information
W-Protection	>	Disable Write Protection / Enable Write Protection
Exit	>	Menu Exit

(2) Mode Select (“v”is shown in selected mode)

Dual Mode	←	Both of external HDD and CD-ROM are recognized
VCD Mode	←	External CD-ROM is recognized. (Useful when OS installing)
HDD Mode	←	External HDD is recognized. (Useful when connecting other devices except PC)

(3) Information

HDD Temp	>	Hard disk SMART information
HDD Health	>	Display HDD health info (Good, Bad) - If bad is shown is shown, please check HDD carefully after backup data.
HDD Model Name	>	-----
Firmware Ver.	>	Display device firmware version
Exit	>	Menu Exit

